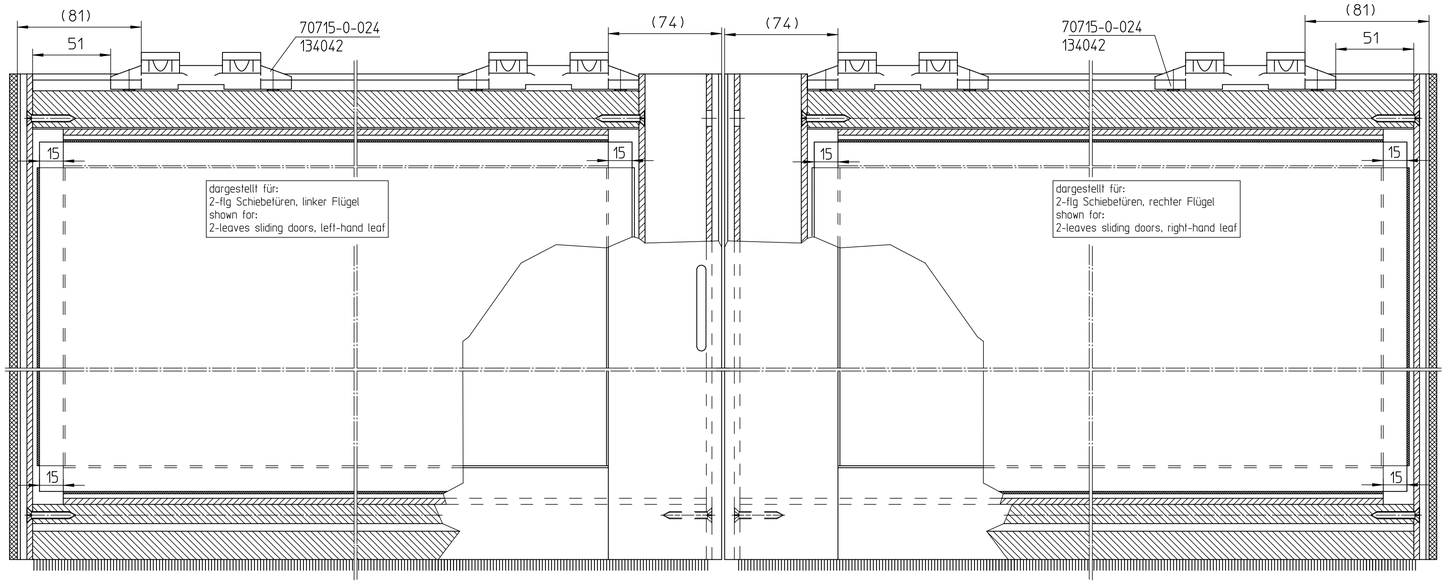

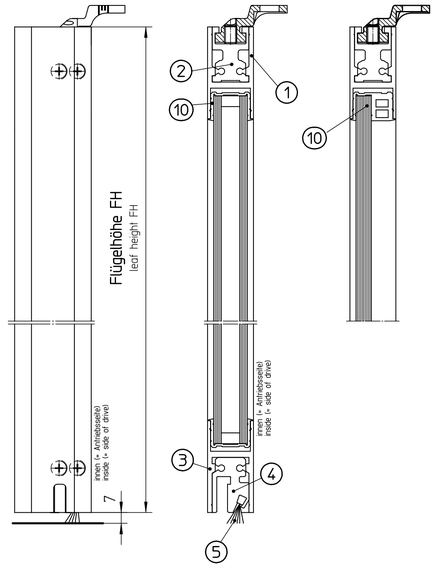

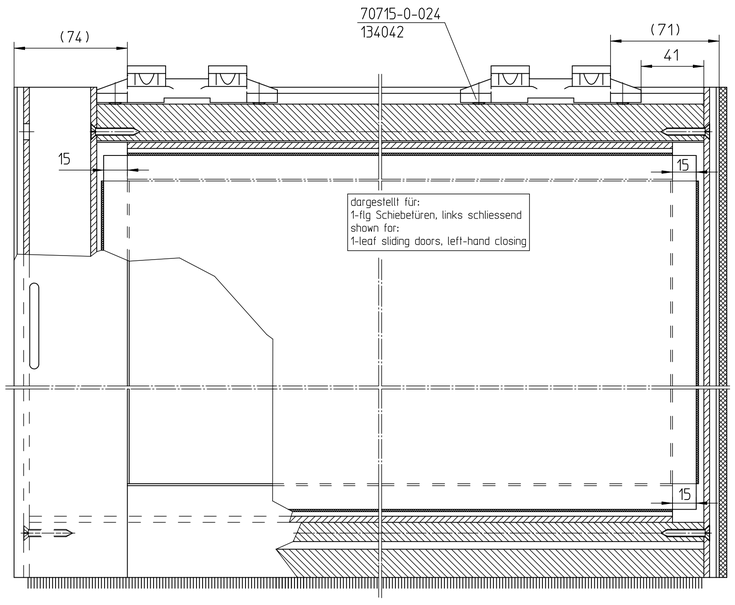

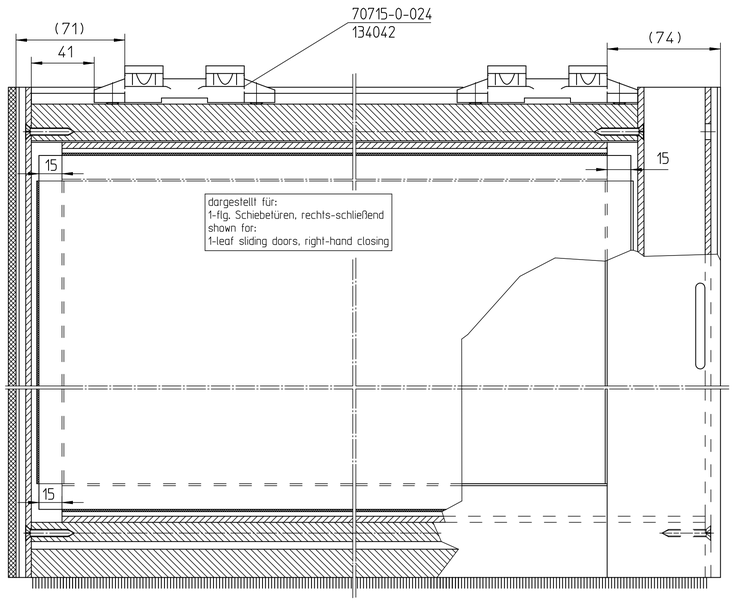

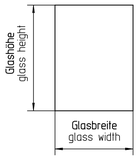

Formelsammlung / formulary		
Flügelmaße / leaf dimensions	1-flg. / single leaf	2-flg. / double leaf
Flügelbreite / leaf width	ÖW + 35	ÖW/2 + 35
Flügelhöhe / leaf height	DH -2	
Glasmaße / glass dimensions	1-flg. / single leaf	2-flg. / double leaf
Glasbreite / glass width	ÖW-44	ÖW/2-44
Glashöhe / glass height	FH -90	
Glasdicke ISO-Glas glass thickness ISO-glazing	22 mm	
Glasdicke ESG/VSG glass thickness ESG/VSG	10 mm	

Pos.	horizontale Profile horizontal profiles		1-flg. single leaf re-schl. R/H closing	 li-schl. L/H closing	2-flg. double leaf
1	70715-2-0313 oben / top	L = FB -109	1 St.	1 St.	2 St.
2	70715-2-0328	L = FB -69,6	1 St.	1 St.	2 St.
3	70715-2-0313 unten / bottom	L = FB -109	1 St.	1 St.	2 St.
4	70715-2-0312	L = FB -25,6	1 St.	1 St.	2 St.
5	70715-2-0269	L = FB -15	1 St.	1 St.	2 St.
Pos.	**vertikale Profile vertical profiles**		1-flg. single leaf re-schl. R/H closing	 li-schl. L/H closing	2-flg. double leaf
6	70715-2-0595	L = FH+20	1 St.	1 St.	2 St.
7	70715-2-0264	L = FH	1 St.	1 St.	2 St.
8	70513-1-0155 Lock A single	L = FH	1 St.	—	1 St.
8	70513-1-0156 Lock A single	L = FH	—	1 St.	—
8	70513-1-0157 Lock A twin	L = FH	1 St.	—	1 St.
8	70513-1-0158 Lock A twin	L = FH	—	1 St.	—
8	70513-1-0163 Lock A single	L = FH	—	—	1 St.
8	70513-1-0164 Lock A twin	L = FH	—	—	1 St.
9	70715-2-0277	L = FH +20	1 St.	1 St.	2 St.
Pos.	**Verglasungsgummi glazing rubber**				
10	horiz. 70715-2-0279	FB -20			
11	vert. 70715-2-0279	FH -70			

Abkürzungen / Abbreviations	
DH	= Durchgangshöhe / clear passage height
ÖW	= Öffnungsweite / opening width
FB	= Flügelbreite / leaf width
FH	= Flügelhöhe / leaf height

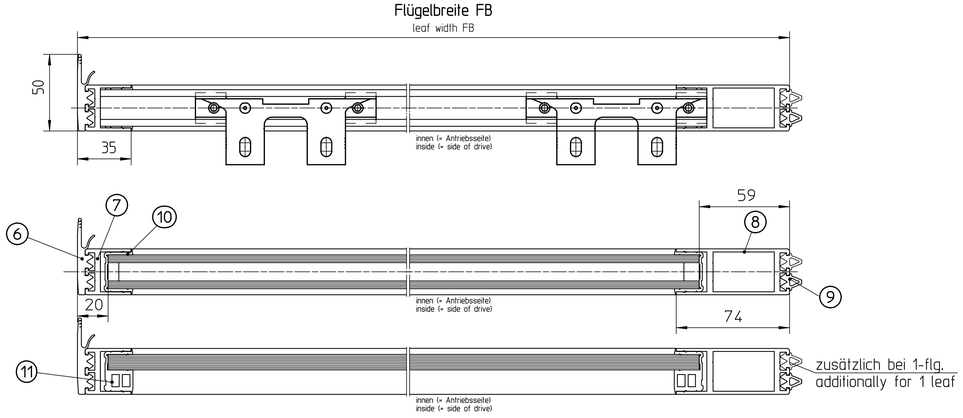

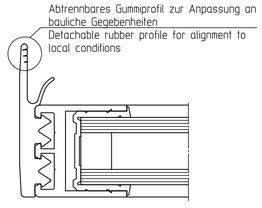

Montagereihenfolge	
1	Horizontale und vertikale Verglasungsgummis ×10 u. 11× aufstecken, überstehende Verglasungsgummis abschneiden
2	Obere Türschiene ×1× mittig auf Verglasungsgummi aufstecken
3	Untere Türschiene ×3× mittig auf Verglasungsgummi aufstecken
4	Aufhängeprofil ×2× in obere Türschiene einschieben, rechten und linken Profilüberstand einhalten
5	Führungsschiene ×4× in untere Türschiene einschieben, rechten und linken Profilüberstand einhalten
6	Bodendichtbürste ×5× in Führungsschiene ×4× einschieben.
7	Tragplatten mit montierten Aufhängeschrauben in Aufhängeprofil ×2× einschieben. Teile gemäß den angegebenen Maßen positionieren und fixieren.
8	Dichtleiste ×7× mit je 2 Blechschrauben am Aufhängeprofil ×2× und an der Führungsschiene ×4× befestigen, Aussparung für Bodenführung nach unten zeigen.
9	Seitenleiste ×8× mit je 2 Blechschrauben am Aufhängeprofil ×2× und an der Führungsschiene ×4× befestigen, Aussparung für Bodenführung nach unten zeigen.
10	Gummi-Nebenschließkante ×6× in Dichtleiste ×7× eindrücken und ggf. kürzen.
11	Türdichtprofil ×9× in Seitenleiste einziehen, entspannen und abschneiden

Assembly steps	
1	Press on horizontal and vertical glazing rubber ×10 × 11× and cut off any excess rubber.
2	Press on top door rail ×1× centrally onto glazing rubbers
3	Press on bottom door rail ×3× centrally onto glazing rubber
4	Insert suspension profile ×2× into in top door rail, observe profile projection on the right and left side.
5	Insert guide rail ×4× into bottom door rail, observe profile projection on the right and left side.
6	Insert floor sealing brush ×5× into guide rail ×4×.
7	Fix bracket supports (part of roller carriages) with square nuts and hexagon screws in shown position and tighten the screws.
8	Fix vertical profile for secondary closing edge ×7× with 2 self-tapping screws at suspensions profile ×2× and with 2 self-tapping screws at guide rail ×4×. Notch for floor guide must be at the bottom end. Observe profiles for right and left door leaf.
9	Fix vertical profile for main closing edge ×8× with 2 self-tapping screws at suspensions profile ×2× and with 2 self tapping screws at guide rail ×4×. Notch for floor guide must be at the bottom end.
10	Pull rubber-profile ×6× into profile for secondary closing edge ×7× and cut to size.
11	Pull sealing profile ×8× into main closing edge profile and cut to size

EMPB = Erstmusterprüfbericht /First sample test report

						GEZE GmbH P.O. Box 13 63 71226 Leonberg Germany	Benennung / designation	ISO-Flügel & Gummi-NSK, Lock A, SL NT/ -FR	
							vertraulich / confidential	ISO-leaf & rubber profile sec. closing edge, Lock A, SL NT/ -FR	
							Datum / date	Name / name	Blatt / von sheet / of 1/1
						erstellt / drawn	23.02.15	tba4	Material-Nr. ID-no. 154925
						gepr. / checked	23.03.15	tba5	Maßstab scale 1:2
	01	23.02.15	tba4	660		Ersatz für: subst. for:			Sprache / language D
	00	23.01.14	tba4	660		Ersetzt durch: subst. with:			Zeichnungs-Nr. / document-no. 70715-9-9863
Index	Änderungen (Kurzzeichen)	Datum date	Name name	Mitteilungs-Nr. Doc. change no.					

Diese Zeichnung entspricht dem Entwicklungsstand des Zeichnungsdatums bzw. der letzten Änderungseintragung. Aus der Benützung der Zeichnung können keine Ansprüche gleich welcher Art verschiedlich hergeleitet werden. Die Zeichnung bleibt unser geistiges Eigentum; sie darf nur für den vereinbarten Zweck verwendet und muß auf Verlangen GEZE gehörig gereinigt werden. Die Zeichnung bleibt unser Eigentum; sie darf nur für den vereinbarten Zweck verwendet und muß auf Verlangen GEZE gehörig gereinigt werden. Die Zeichnung bleibt unser Eigentum; sie darf nur für den vereinbarten Zweck verwendet und muß auf Verlangen GEZE gehörig gereinigt werden.
This drawing shows the actual state or product development at the date of the drawing or the revision date. No claims or damages in any form can be made against GEZE as a result of the interpretation of this drawing. This drawing remains the property of GEZE and is made available to third parties only for the duration of contractural obligations. All rights connected with this drawing remain in possession of GEZE. This drawing may not be copied or handed over to third parties without the express consent of GEZE.